 



ALL-FLEX™ ELECTRIC TABLE BASE

Model FLEX2-SLV-V3
Model FLEX2-BLK-V3
Model FLEX2-WHT-V3

FLEX2 V3 Rev 01 7 /17

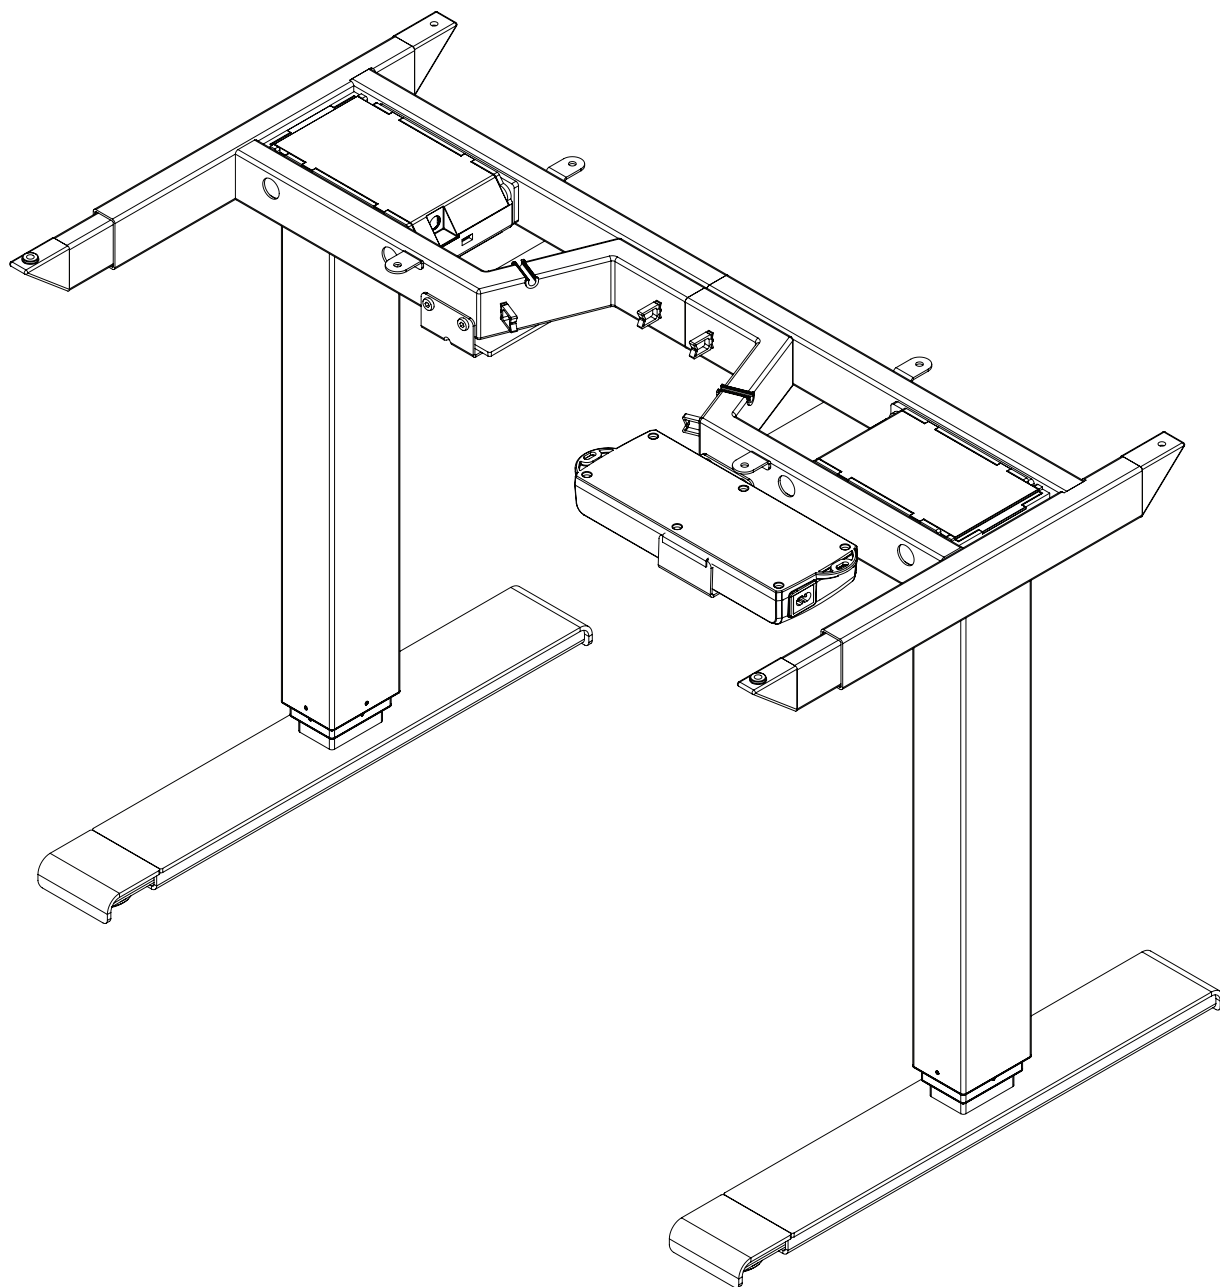

 ASSEMBLY AND OPERATION

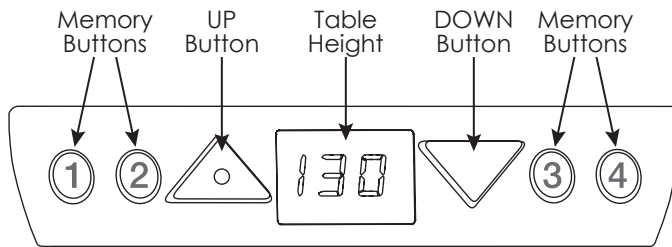

CAUTION: The “zero setting” procedure must be completed before operating the table. See Step 16 on page 8.

GENERAL OPERATION

Move the table up or down by pressing UP ▲ or DOWN ▼ until the work surface reaches the desired height.

The table will continue to move up or down until you release the button or until the maximum or minimum height is reached.

IMPORTANT: Be sure there are no obstructions to table movement along its full range of travel.

Table movement stops when you release the UP ▲ or DOWN ▼ button.

SETTING A MEMORY POSITION

The memory buttons allow you to save up to four specific positions of the work surface. To set a memory position:

- Adjust the work surface to the position you want to save. (The display on the control pad shows the work surface height.)
- Press the UP ▲ button and one of the memory buttons at the same time for 3 to 5 seconds.
- The display will flash “P” and the number of the memory button.
- Repeat for the other memory buttons, if desired.

Example: Press the UP ▲ button and memory button number 3 at the same time for 3 to 5 seconds. The display will flash “P3” indicating that the current table position has been saved in memory.

MOVING TO A MEMORY POSITION

 
- Press and hold the desired memory button.
- The work surface will move to the preset position.

Continue to press the memory button until table movement stops.

Zero Set Instructions:

“Zero set” the system before testing operation. (Note that with the table and keypad upside-down, the UP ▲ and DOWN ▼ buttons face their opposite directions.)

- Press and hold the UP ▲ and DOWN ▼ buttons at the same time. Continue to hold the buttons. The legs will lower until they reach their bottom point.
- Release the buttons once the system beeps. If it does not beep, continue to hold the buttons for 3 seconds after the legs reach the lowest point. The system is now “zero set.”
- Press the UP ▲ and DOWN ▼ buttons to test operation. End your test with the legs lowered and unplug the power cord.
- If there are problems with operation, check that all cable and cord connections are secure. If problems continue, call ESI Customer Service.

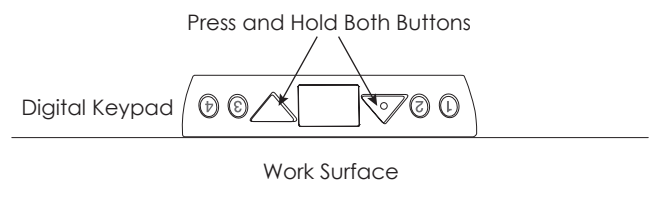



LIMITED WARRANTY

ESI warrants this product to be free from defects in manufacturing for a period of 15 years on structural parts and 7 years on electrical parts from the date of original purchase. This warranty extends only to the original purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, modification, alteration, or improper cleaning or maintenance. This warranty does not apply to damage in shipment caused by carriers, damage caused during installation, normal wear and tear, or excessive use (meaning consistent use in excess of an eight hour shift). ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. ESI's sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at ESI's option, of the product or any defective part. Costs (such as installation, labor fees or express shipping) incurred due to replacement of products are not covered under warranty. IN NO EVENT SHALL FELLOWES, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES.

To make a warranty claim, contact ESI at 800-833-3746 or customerservice@esiergo.com. You must provide proof of purchase, such as the original purchase order number.

The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law.