

PRODUCT: ELECTRIC HEIGHT ADJUSTABLE TABLE with DISPLAY SWITCH

 
DOCUMENT: USER INSTRUCTION GUIDE

IMPORTANT: READ INSTRUCTIONS BEFORE OPERATING TABLE

## **HOW TO ADJUST THE TABLE:**

General Operation

1. Press and hold the <u>DOWN</u> or <u>UP</u> arrow button to move the table to the desired height.



#### **Memory Positions**

- 2. To store a surface height in memory; follow steps A, B and C below.
  - A. Move the table to the height position to be saved.
  - B. Press and release button S, then press and release button 1. Position 1 is now saved.
  - C. You may repeat steps a) and b) to store additional heights  $\underline{2}$  and  $\underline{3}$ .
- 3. To move to the desired positions saved in memory, press and hold the desired key ( $\frac{1}{2}$ ,  $\frac{2}{2}$  or  $\frac{3}{2}$  as required). The table automatically stops when the pre-set height is reached.
- 4. Any or all of the stored memory heights can be changed at anytime by following step 2.

### SETUP INSTRUCTIONS AND TROUBLESHOOTING TIPS

### **Initialization Procedure:**

When you are using the table for the first time, you must INITIALIZE the table legs.

- Adjust the table to the lowest position and release the switch.
- Press and hold the <u>DOWN</u> button for 10 seconds. The legs should move up and down a small distance to indicate that the command has been received.
- Adjust the table to the highest position and back down to the lowest position twice in order to establish the full range of the table.

The table is now ready for normal use.

# Re-Initialize the Table:

- If the legs are not operating properly, move slowly &/or only downward.
- If the table has been moved &/or relocated after being initialized.
- If at any time an actuator (leg) looses it's connection to the control box. Connecting cable pulled out during operation. Re-connect cable and carry out initialization.
- If the table impacts an obstruction during operation more than once. Re-initialize and ensure there are no obstructions in either the up or down direction.
- If the display shows <u>E01</u>, you must REINITIALIZE the system. If you see other <u>E##</u> codes, carry out a re-initialization and if this does not address the issue contact your facilities representative for assistance.

## Setup the Display:

• Press and hold the <u>UP</u> and <u>DOWN</u> buttons together as required to adjust the height shown on the display. After 5 seconds of inactivity, table returns to normal operation.